















 









Kanalplan Baspaket 3

	Kanalnamn	Kanalplats	Frekvens
	SVT1	E5	175,25 MHz
	SVT2	S5	133,25 MHz
 	Barnkanalen/svt24	S7	147,25 MHz
	Kunskapskanalen	S8	154,25 MHz
	TV3	E7	189,25 MHz
	TV4	E6	182,25 MHz
	Kanal 5	E10	210,25 MHz
	TV6	S34	407,25 MHz
	Sjuan	E11	217,25 MHz
	TV8	E9	203,25 MHz
	Kanal 9	S19	287,25 MHz
	TV10	E12	224,25 MHz
	TV11	S11	231,25 MHz
	TV4 Sport	E8	196,25 MHz
	TV4 Fakta	S18	280,25 MHz
	Discovery Channel	S17	273,25 MHz
	Animal Planet	S14	252,25 MHz
 	TCM/Cartoon Network	S16	266,25 MHz
	VH1	S13	245,25 MHz
	TV Finland	S15	259,25 MHz
	24 Norrbotten	S6	140,25 MHz
	CityNet informationskanal	S10	168,25 MHz
	Ledig plats för att ha en egen informationskanal	S33	399,35 MHz