

























Logotype	Kanalnamn	Kanal	Frekvens
	CityNet informationskanal	S34	407,25 MHz
	24 Norrbotten	S6	140,25 MHz
 	SVT Barnkanalen/SVT24	S8	154,25 MHz
	Kunskapskanalen	E6	182,25 MHz
	SVT1	E5	175,25 MHz
	SVT2	E7	189,25 MHz
	TV4	S7	147,25 MHz
	TV4 Sport	S18	280,25 MHz
	TV8	S14	252,25 MHz
	Kanal 5	E10	210,25 MHz
	TV4 Plus	S5	133,25 MHz
	TV3	E11	217,25 MHz
	TV11	S11	231,25 MHz
	Discovery Channel	E12	224,25 MHz
	Nature/Crime	S13	245,25 MHz
	Kanal 10	S9	161,,25 MHz
	Eurosport Nordic	E8	196,25 MHz
	Disney Channel	S16	266,25 MHz
	TV4 Film	S17	273,25 MHz
	TV4 Fakta	S12	238,25 MHz
	Kanal 9	S19	287,25 MHz
	Rosviks KTV informationskanal	S10	168,25 MHz
	TV6	E9	203,25 MHz
	TV10	S15	259,25 MHz